

MVD AUTO COMPONENTS Pvt Ltd - OEM Reference Parts List (Updated 1st Aug 2021)

www.mvdindia.com

S. No.	Item	Ref OEM Part No.	MVD Part No.
	Oil Pressure Switch	M/F : 3599307T91, 1877721M92, 1833647M1	5886
		Ford/Case/IH : 1534526C2, 3060472R91, K311686, K903851	
		Perkins : 3.152, 4.236, 6.354 Phaser 1000 Series 4 / 6 cylinders	
		Rover: GPS 101, 106, 108, 111, 117, 129, DRC 3202	
		BMC : 13H6462YR-2M201008	
	Oil Pressure Switch	M/F : 1877721M91	5955
	Oil Pressure Switch (Aftermarket design)	M/F : 1856097M91	5972
		Ford/Case/IH : D8NN9278BD, F1NN9278AA, D8NN9278AA, 81873524, 82028130, 83953056, 83953057, 83953096	
		Rover: 567920,586742,GPS104,110,115	
	Oil Pressure Switch	Ford/Case/IH : 04998770, 05107603, 12326780, 4998770, 4998771, 5107603, 5160694, 5166458, 82036587, 87694764	5885
	Oil Pressure Switch (Adjustable Type)	M/F: 509682M91, 273541M1	5113-2B4NO
		Pekins: 2848A013 , MF135, MF150, MF165, MF175, MF180, MF230, MF235, MF245, MF255, MF265, MF275, MF285 (s/n 9A349239 & up), MF1080, MF1085, MF1100, MF1105, MF1130, MF1135, MF1150, MF1155, MF1505, MF1805	
	Oil Pressure Switch	Perkins : 2848062	7090
	Oil Pressure Switch	M/F : 3815773M92	6120
	Oil Pressure switch	Ford/Case/IH: 3055238R93, 376855R92	7006
	Oil Pressure Switch	Ford/Case/IH : 277016A1	7007
		McCormick Tractor	
	Oil Pressure Switch	Ford/Case/IH : 87395493, 82030730, 82031395, 79043250, 5115055	5930
	Oil Pressure Switch	Ford/Case/IH : 5161047	5938
	Oil Pressure Switch	Ford/Case/IH : 87384756, 5163540	5945
	Oil Pressure Switch	Ford/Case/IH : 87494631, 47134924	5939

	Oil Pressure Switch (OEM type design)	Ford/Case/IH : 82036587	5924
	Oil Pressure Switch (OEM type design)	Ford/Case/IH : 91450C1, 3055238R92, 3129031R91, 3132673R92, 376855R92, 100E9278, 81711892	5925
		Rover : OPS7210	
	Oil Pressure Switch	Ford/Case/IH : 84053656	5929
	Oil Pressure Switch (OEM type design)	Ford/Case/IH: 1534526C2	5926
	Oil Pressure Switch	Ford/Case/IH : 441166, 84053657, 87675193	5928
	Oil Pressure Switch	Ford/Case/IH : 87384755	5932
	Oil Pressure Switch (OEM type design)	Ford/Case/IH : D8NN9278BD, F1NN9278AA, D8NN9278AA, 81873524, 82028130, 83953056, 83953057, 83953096	5923
	Oil Pressure Switch	M/F : 1877721M92	5841
	Oil Pressure Switch	Ursus: 50766460 / 50766461	5842
	Oil Pressure Switch	Ursus : 50426370	5846
	Oil Pressure Switch	Zetor: 50/42-637/0	5845B
	Oil Pressure Switch	5040995310	5845
	Oil Pressure Switch	80350921	5847
	Oil Pressure Switch	83355942	5843
	Oil Pressure Switch	976647	5850
	Oil Pressure Switch	Ford/Case/IH : K311686, K903851, 3060472R91	5330
	Oil Pressure Switch	Ford/Case/IH :81873524, D8NN9278BD, F1NN9278AA, E1ADDN9278, 81711891, 83953056	5935

	Oil Pressure Switch	CNH 504084983	7196
	Oil Pressure Switch	CNH 504085003	7197
	Oil Pressure Switch (Suco Type)	CNH 87395493	7199
	Oil Pressure Switch	Rover: PRC6387, 4044	5315
	Oil Pressure Switch	Landrover: 90519864	5314
	Oil Pressure Switch	CNH: SBA185246330	6172
	Oil Pressure Switch (OEM type design)	John Deere : AT85174	5876A
	Oil Pressure Switch (Aftermarket design)	John Deere : AR27977	5886D
	Oil Pressure Switch	JD M809526	7251
	Oil Pressure Switch	JD AM100856	
	Oil Pressure Switch (Double Terminal)	M/F : 35951861M2	TMP 432
	Oil Pressure Switch (Brown Cap)	V 887283760	7209
	Oil Pressure Switch	V 619400	7210
	Oil pressure Switch	1409-1800, AR27977, AT85174	6093
	Oil pressure Switch	JD: M152192, 27010-2234 27010-0851	6170
	Oil pressure Switch	MF: 026697T1	7067
	Oil Pressure Switch	Generac: 99236 99236GS 099236 G099236	7190
	Brake Pump Switch	John Deere : AL27809, AL67715	6250

	Hyd Pump Warning Switch - MF260	M/F : 168704M1	5959
	Hydraulic Pressure Switch	Ford /Case/IH : 87660483, 81867735, 135700710020	5942
	Hydraulic Pump Switch	M/F : 1693367M1, 1693368M1, 3381286M1, 3381387M3	5957
	Safety Start Switch	M/F : 1012043M91, 1679223M1, 1679223M2, 34198, 39121, 39855, 888501M2, 963417M2, 3381094M1, SMB497	5984
	Diff Lock Switch	M/F : 3763601M1	5958
	Safety Start Switch	M/F / UZEL : 0013886U92	5960
	Safety Start Switch	M/F / UZEL : 0017373U91	5989
	Safety Start Switch MF398	M/F : 3761983M91, 3598530M1, 3697346M1, 3697346M91, 1693818M1	5956
	Safety Switch (Wire Terminal)	M/F : 181140M94 /M92/M93/M91	5371WT
	Safety Switch (Stud Terminal)	Ford/Case/IH : 81817901, 81871479, C7NN7AR47A, C5NN7222C	5371ST
	Safety Switch (Screw Terminal)	Ford/Case/IH : C7NN7A247B, C5NN7A247A, 237296	5371SC
	Neutral Switch	CNH: C7NN7A247A, 81817901	5371CNH
	Safety Switch with 2 wires	M/F : 037171T2	5371L
	Neutral Safety Switch	M/F : 3698425M1	6249
	Neutral Safety Switch	JD AM37643	7252
	Neutral Safety Switch	JD CH13415	7253
	Safety Start Isolator Switch	Ford/Case/IH : 81712538, E1ADDN11500	7010
	Diff Lock Switch	Ford/Case/IH : 231262A1, 1332724C1	7011
	Brake Switch (Hydraulic)	AL27809 , AL67715	7217
	Brake Switch	M/F : 3759508M91	5971
	Brake Switch	Mercedes Trucks : 000 545 6909	7095
	Hand Brake Switch	CNH 3401400R1	7200

	Switch Brake light	CNH: SBA385200731	6330
	Brake Switch	1102-0900, 47981144, 82029539, 82033989, 84281135	5932
	Switch Safety, Rear PTO	CNH: SBA385201260	6331
	Reverse Gear Switch	5631100	5844
	Reverse Gear Switch	Rover: PRC2911	5377
		OTOKAR : 71A00-36315-AA	
	Reverse Gear Switch	Mercedes / Volkswagen : 0045452714	7060
	Temp Transducer MF240/285/286	M/F : 1877731M92 / M93 / T92M, 1825118M91	5884
		Ford/Case/IH : K952332	
		David Brown : K952332	
	Temp Transducer	540995240 / 38004736001	7159
	Temp. Switch	Ford/Case/IH : 3057575R91, L2441828	7008
	Temp Switch	Ford/Case/IH : 3127956R91, 3073787R1	7169
	Temp. Switch	Ford/Case/IH : A187687	7009
		John Deere : A187687	
		M/F : 3812023M1M	
	Temp Switch	CNH 504264463	7201
	Temp Switch	John Deere : AL24527, AZ15473, DE12465	6252
	Temp Sender	John Deere : RE51774	7314
	Temp Sensor	Ford/Case/IH : 9712608, 87307746, D8NN10884A, 83917490, 83948391, 89712608	5931
	Temp Sensor	Ford/Case/IH : A166057, 84300765	5934
	Temp. Sensor	Ford/Case/IH : 87307745	5931
	Temp Sensor (Max 150C)	Ford/Case/IH : C4AH10884A, 173321, 81784007, 81784077, 87554838	5275T
	Temp. Sensor (Max 150C)	81784007/81784077/C4AH10884A	6112
	Temp. Sensor (Max 120C)	1109-9510, C4AH10884A, 173321, 81784007, 81784077, 87554838	5809A
	Temp Sensor	Ford New Holland : 05108205, 4178363, 5108205	6251
	Temp Sensor	JCB	7092

	Temp Sensor	V 654271209	7214
	Temp Sensor	URSUS 0080350932	5042
	Temp Sensor	JD T110736	6171
	Water Coolant Temp Sensor	CNH SBA385720070	6175
	Coolant Temp Sensor	CNH 4897224	7198
	Coolant Temp Sensor	V 836667732	7213
	Coolant Temp Sensor	John Deere : RE500844	7315
	Temp Switch	John Deere : CH15516	7313
	Temp Sensor with Switch	Mercedes : 004 542 5617, 002 542 7317, 007 542 0917	7024
	Temp Sensor with Switch	V 836640772	7211
	Temp Sensor with Switch	V 654271208	7212
	ECU Temp Sensor	CNH: 504264463, 2852087, 2853279, 285350, 2856350, 504032877, 6905117	7201
	Oil Pressure Sensor / Transducer	Ursus : 380057250033	5937
	Oil Pressure Sensor	Bizon : 504099518	5937B
	Oil Pressure Sensor with Switch	Mercedes : 0025421717, 0075451717	7048
		MAN : 51.27421.0009	
	Speed Sensor	JD: RE519144	7325
	Magnetic Speed Sensor	JD: AL162765, AL204621, AL75653, AL162845	6407
	Electronic Speed Sensor	JD: RE558874, RE295929, RE204888	6408
	Ignition Switch	M/F : 1446116M1, 1446116M91, 1865976M91, 1874120M91, 1874120M92, 1874120M93, 1874120T93, 1874120T94, 1874535M3, 2846130, 34228, 35670, 3640789M1	5867
		Perkins : 2846121, 2846130	
		David Brown : 3107556R92, K203992	
		Ford/Case/IH : 3107556R92, K203992	
		Valmet/Valtra : 32553200, 816450	

	Ignition Switch with Loom and 4 Pin Connector	M/F 3699692M91, 2699692M92	6247
	Ignition Switch with Wire Loom	FORD 8N3679C	6241
	Ignition Switch	M/F 3000 Series : 00112243, 001123U91M- 3779699M	5999
	Ignition Switch	Ford/Case/IH : E7NN11N501AA/AC/AB, D1NN11603B, D5NN11N572A, E8NN11N501AA, C5NN11N501A, C5NN11N572A, D5NN11A578A, D3NN11N501A, 81871583, 83959710, 83976890, 81838692, 83902803, 83999543, 87554837	5857
	Ignition Switch	Ford/Case/IH : 282775A1, D134737, 3688342M92	5822
	Ignition Key (Single)	Ford/Case/IH : 1964831C2, 414757A1	5822-S
	Ignition Switch	John Deere AR58126, AR47459, AR53452	5822JD
	Ignition Switch 3 Position	JD: AT310925	6288
	Ignition Switch 4 Position	JD: KV23440	6288A
	Ignition Switch	JD: AR39505	P1106
	Starter Switch	42342100, 55115731	6159
	Starter Switch	59115613	6160
	Push Start / Horn Switch	M/F : 189158M91, 393209R91	5820
	Horn & Light Switch (Small)	M/F : 0013598U91, 2486119, 3763601	5997
		Ford/Case/IH : 5086008, 5132021	
		SAME : 2.7409.050.0	
	Horn & Light Switch (Big)	M/F : 1668816M1 / M91, 1699034M91	5201
		Ford/Case/IH : 1502378C1, K300657, K300791	
		David Brown : K300657, 1502378C2	
	Signal Switch	M/F : 001565M, 1881670M1, 3101795M1, 1672755, 1682977, 881670M1	5200
	Fuel Pump Solenoid 12Volts (Lucas type with single stud terminal)	Perkins : 28480015	5973

	Fuel Pump Solenoid 12Volts (Lucas type with 2 blade terminals)	M/F : 189646M1, 4224670M1, 28730179 Ford/Case/IH : 218323A1, 340521A1	5891
	Fuel Pump Solenoid 12Volts (Lucas type with single stud terminal)	Lucas Type Fuel Pump 12 Volts	5068
	Fuel Pump Solenoid 24Volts (Lucas type with single stud terminal)	Lucas Type Fuel Pump 24 Volts	5068X
	Fuel Pump Solenoid 12 Volts (Delphi type with single stud terminal)	Ford/Case/IH : 83981012 E8NN9D278AA John Deere : RE22744/RE54064	5068E
	Fuel Pump Solenoid 12 Volts (Delphi type with 2 blade terminal)	Perkins : 26420472	7025
	Fuel Pump Solenoid 12 Volts (Delphi type with single stud terminal)	Delphi / Lucas type Fuel Pump 12 Volts	7025A
	Fuel Pump Solenoid 12 Volts (Bosch type with single stud terminal)	Ford/Case/IH : A77753 Fendt : F816201710020	5069
	Fuel Pump Solenoid 12 Volts (Bosch type with single stud terminal)	2852741	5069E
	Fuel Pump Solenoid 24 Volts (Bosch type with single stud terminal)	Bosch Type Fuel Pump 24 Volts	5069X
	Fuel Pump Solenoid 12V	CNH: J904630, Re22744, Re54064, 449679A1, F7779916, 3904630	7183
	Flasher Relay 12 Volts 5 Pin	John Deere AL76702	5243
	Solenoid	CNH: SBA185206085	7195
	Glow Plug Thermostart (Blade Terminal)	M/F / Perkins : 1446935M1, 2666108, 3583453M2, 3583543M2, 893501M91 Ford/Case/IH : 603922, 81806046, 83933675, 87800843, C5NE9A436A, E1NN9A436AA David Brown : K928523 John Deere : AR63103	5527

	Glow Plug Thermostart (Screw Terminal)	M/F / Perkins : 2666103, 893501M1, 893501M91	5527ST
	Glow Plug	Ursus : 50024641	5528
	Resistor Block	Ford/Case/IH : 8NE10306	5818
	Resistor	JD: RE217662	6419
	Terminal Block	Ford / Case/ IH : 8NNN14448A	7166
	Foot Operated Starter Switch	Ford / Case/ IH : 9N11450A / 356913R91	6142
		Delco : 1972119, 1972121, 1996487, 1996497	
	Push Button Starter Switch	Ford : 8N11500	6143
	Foot Operated Starter Switch	John Deere : 1882323 , 1925781	9191
	Headlight Switch with Fuse	Ford / Case/ IH : 9N11652	6144
	Ignition Delay Mudule	John Deere AM128906	7225
	Solenoid Valve, Diff Lock	CNH: 1971474C3	7288
	Oil Pressure Sensors / Transducers	Complete Range (Equivalent to VDO / Continental Part Numbers)	
	Oil Pressure Switches		
	Temperature Sensors (Thermisters)		
	Temperature Switches (Bimetallic)		

Note : Manufacturers' names and OEM Part numbers mentioned above are for Reference Purpose only and are not intended to suggest that all our parts are used as Original Equipment for them. Since Vehicle manufacturers are constantly modifying their vehicles, we cannot guarantee the full accuracy of the information given in this list. It is only intended as a guide to our products.